



## INSTALLATION INSTRUCTIONS

### PZ2318 2" Front Receiver Hitch

Cannot be used on vehicles equipped with winch

Fits: Polaris RZR XP, XP-4; 2024 & Newer




### ***Tools and Supplies***

Ratchet Wrench  
15mm Socket  
T40 Torx Bit or Wrench

### ***Installation Instructions***

1. Remove front winch cover. There are two (2) T40 Torx bolts at the top (arrows in photo marked "A") and two (2) hex-head bolts at the bottom (arrows in photo marked "B").

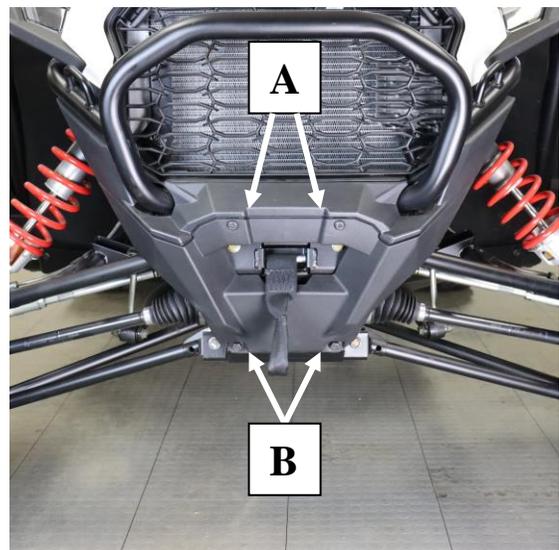

2. Remove the tow strap plate. There are four (4) hex-head bolts (arrows in photo marked "C").
3. Install Hitch. Install the four (4) hex-head bolts from the tow strap plate into the top four (4) holes in the hitch (arrows in photo marked "D").
4. Temporarily thread the two (2) hex-head bolts previously removed from the bottom of the front winch cover into the bottom two (2) holes of the hitch (arrows in photo marked "E").
5. Tighten the top four (4) hex-head bolts (arrows in photo marked "D").
6. Remove the bottom two (2) hex head bolts that were temporarily installed in step #4 (arrows in photo marked "E").
7. Re-install the front fascia (using the original bolts).

