




## INSTALLATION INSTRUCTIONS

### **PZ9417 Front Whip / Flag Mounting Bracket**

Fits: Polaris RZR 900 Trail, 900 XC, 900-S, 1000-S & 1000 Trail; 2015 & Newer  
Polaris RZR XP 1000, XP-4 1000; 2015 – 2023  
Polaris RZR XP Turbo & XP-4 Turbo; 2016 - 2021  
(Does **NOT** fit XP Turbo-S, 72" wide models)

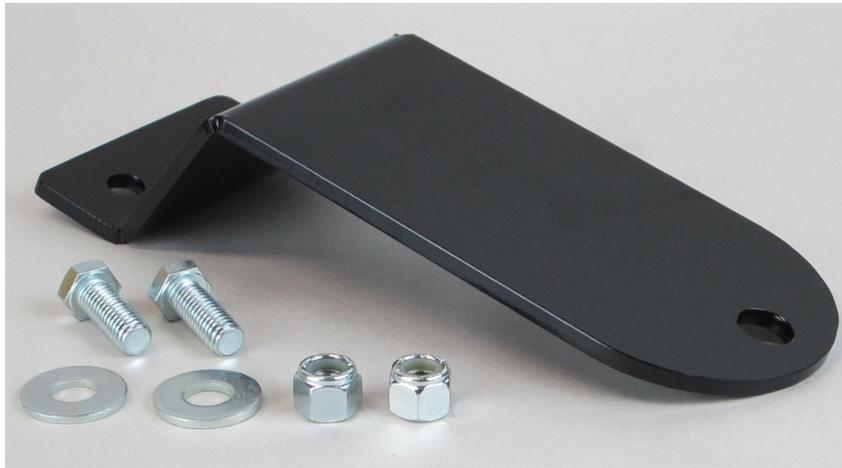


### **Tools and Supplies**


Ratchet Wrench  
3/8" Socket  
9/16" Socket  
9/16" Combination Wrench

# Installation Instructions


1. Remove the front grille insert (arrows in photo marked "A").
2. *All RZR's, except 2019 & newer XP models -* Remove the fairlead cover plate from the lower-section of the front fascia / plastic nose-piece (arrows in photo marked "B").
3. Looking down through the grille opening, you will see a section of the RZR frame between the main frame tubes with seven holes (just in front of the lower edge of the radiator). This is where the front whip / flag mount will be installed. This section of frame is shown in photos below (marked "C").

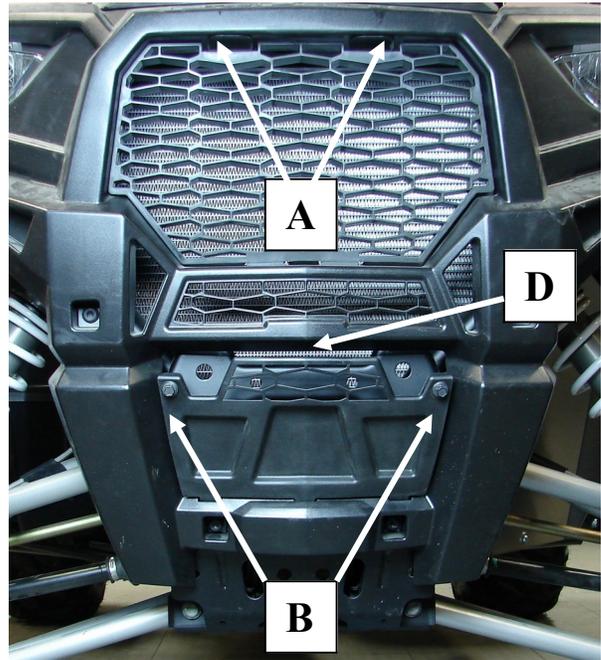

4. *2019 & newer XP models -* Set the whip / flag mount in-place. This will be accessible through the grille opening, with the whip / flag mount "tongue" above the fairlead cover plate (as shown in photo). The two frame mounting holes will align with two of the holes in the seven-hole section of the frame (arrow in photo marked "C").

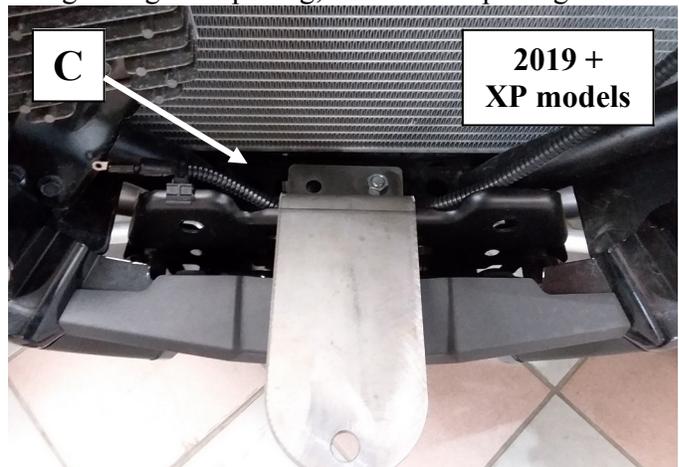

5. *All RZR's, except 2019 & newer XP models -* Set the whip / flag mount into position. It will be installed with the whip / flag mount "tongue" located at the top of the fairlead opening (arrow in photo marked "D"). The two frame mounting holes will align with two of the holes in the seven-hole section of the frame (arrow in photo marked "E").

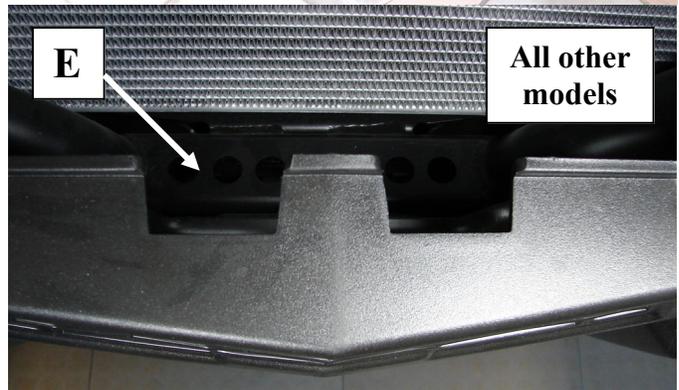

6. Install the two 3/8" bolts. The bolts will pass down through the whip / flag mount and then through the RZR frame. Install flat washers and nylon lock nuts onto these two mounting bolts. Tighten these nuts so that they are snug, but not fully tightened.
7. Align and center the whip / flag mount on the RZR, and tighten the two 3/8" frame mounting nuts.
8. Re-install the front grille insert and fairlead cover plate (if removed).
9. Install your whip or flag